

LINKSYS®

A Division of Cisco Systems, Inc.



Package Contents

- 2300 Series Camera
- Stand Kit
- Power Supply (12V 1A)
- 6' Ethernet Cable
- Lens Adapter Ring
- Allen Wrench
- Quick Installation Guide
- Setup CD
- Antenna (WVC2300)

Business Internet Video Camera with Audio

LINKSYS  Ready

Model: **PVC2300, WVC2300**

QUICK INSTALLATION

BUSINESS SERIES


CISCO™

Table of Contents

Minimum Requirements	4
Installation	5
Configuration.....	8
Adjusting the Lens.....	14

Online Resources

Website addresses in this document are listed without **http://** in front of the address because most current web browsers do not require it. If you use an older web browser, you may have to add **http://** in front of the web address.

Resource	Website
Linksys	www.linksys.com
Glossary	www.linksys.com/glossary
Network Security	www.linksys.com/security

Copyright and Trademarks

Linksys is a registered trademark or trademark of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries. Copyright © 2007 Cisco Systems, Inc. All rights reserved. Other brands and product names are trademarks or registered trademarks of their respective holders.

Minimum Requirements

Minimum System Requirements (for 1 camera):

CPU	Pentium 4 class, 2GHz
Memory	1GB
Operating System	Microsoft Windows 2000, XP or Vista
Hard Drive	30MB of available space
Graphics Card	AGP with a minimum 64MB
Browser	Internet Explorer 6.0 (or above), Mozilla [†] Firefox, and Netscape7.0 (or above)

[†]Mozilla users must download ActiveX plug-in at <http://www.iol.ie/~locka/mozilla/mozilla.htm>

1 Installation




NOTE: Before attaching the camera extension or swivel head, the stand base can be mounted in a permanent location by using three screws to secure the stand base to the desired location.


- A.** The Camera stand can be connected two different ways:

Attach the stand base to the camera extension and attach the camera extension to the swivel head.

You can connect the swivel head directly to the stand base if the extension isn't necessary.

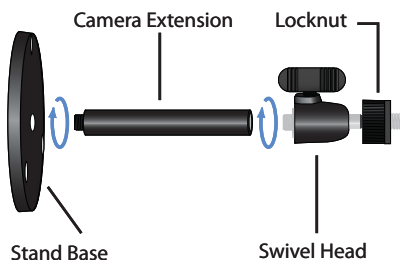


OR

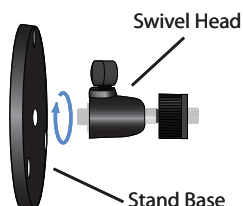


- B.** Connect the camera stand to the bottom of the camera. Adjust the camera to the appropriate viewing position.

Once the camera is positioned properly, secure the camera in place by tightening the locknut.

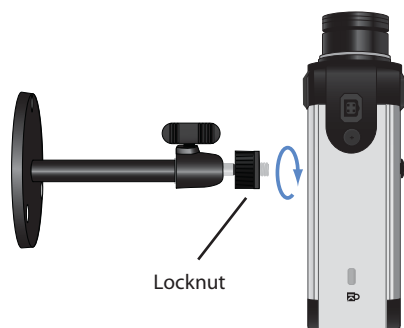

- C.** Connect the included Ethernet network cable to your network router or switch.

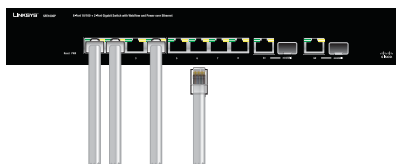


- D.** Connect the other end of the cable to the Camera's Ethernet port.

If your network switch provides Power over Ethernet to the Camera, verify the Camera's LEDs are lit and skip steps E-G.



- E.** Connect the included power adapter to the Camera's Power port and plug the other end into a standard electrical outlet.


Verify that the Camera's LEDs are lit.

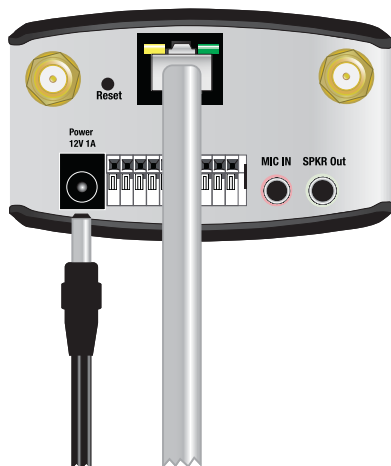




NOTE: Steps F and G on this page are only necessary if you are using the WVC2300 Wireless-G Business Internet Video Camera.

- F.** Connect the antennas to the antenna connectors on the Camera.

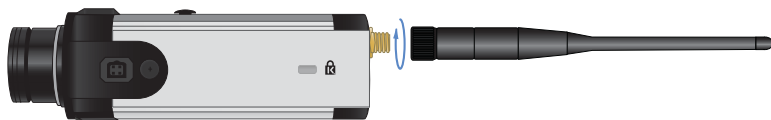


- G.** Place the antennas in an upright position.

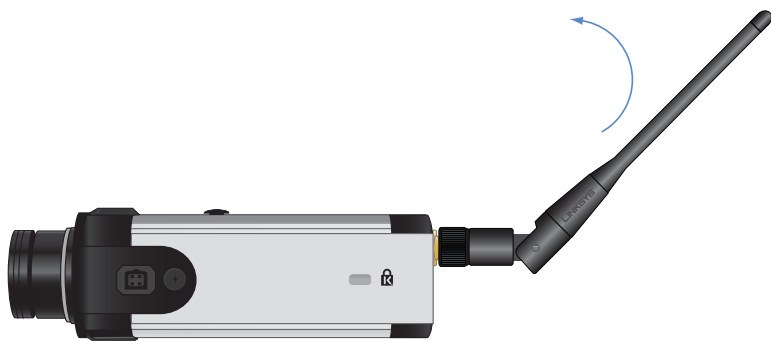


2 Configuration


- A.** Insert the Setup CD into your CD-ROM drive. If the CD doesn't run automatically, go to **My Computer** and click on your CD-ROM drive.

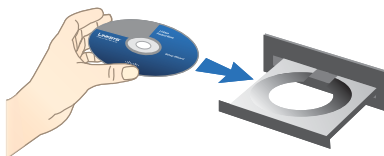

- B.** The Setup screen will appear. Click the **Click Here to Start** button.

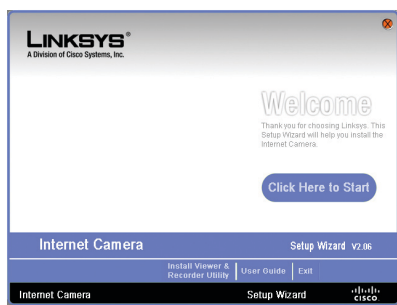

- C.** The license agreement screen will appear, click **Next** if you agree and wish to proceed.

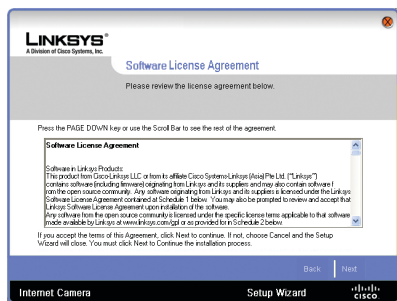


- D.** The Wizard will now search for your camera.




Once found highlight the camera and click **Next**.

If the Camera you want is not displayed in the *Selection* box, click **Search Again**.

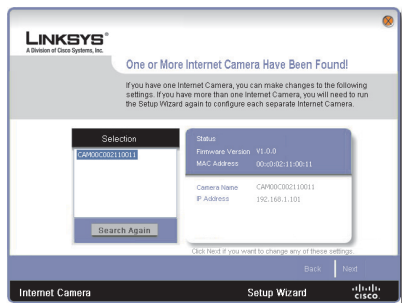


NOTE: The Camera defaults to DHCP mode. If your network doesn't have a DHCP server or if you are having issues obtaining an IP address, you can assign a static IP address to the Camera by pressing the reset button for less than 3 seconds. A static IP address of **192.168.1.99** will be assigned to the Camera.

Reset Button

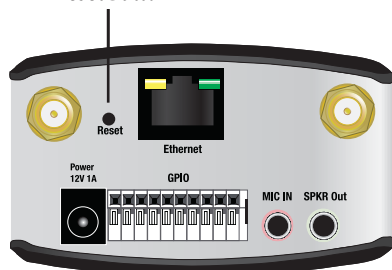

WARNING: Pressing the reset button for 10 seconds will restore the factory default settings, including setting the Camera to DHCP mode.


- E.** The default username and password is **admin**. Type **admin** in lowercase letters, in the *Administrator Name* and *Administrator Password* fields, then click **OK**.

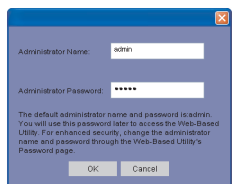

For security purposes, it is recommended that you change the default name and password using the Camera's web-based utility at a later time.

- F.** On the Basic Settings screen, change the following settings:

Camera Name: Enter a unique name for the Camera, up to 15 characters in length. Unique names are helpful when you are using multiple Cameras on the same network.

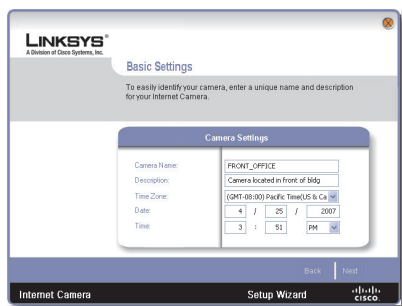


Description: Enter a description, up to 32 characters in length, with additional information, such as the location of the Camera.

Time Zone: Select the time zone that corresponds with the Camera's location.


Date: Enter the current date in the provided fields.

Time: Enter the current time in the provided fields. When you have finished making changes, click **Next**.


- G.** If you know your IP address, then select **Static IP address**, otherwise leave the default setting, **Automatic Configuration DHCP**.

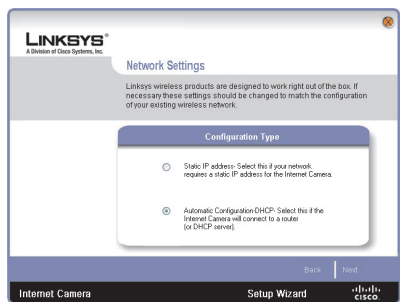

- H.** The New Internet Camera Settings screen will appear and display the Camera's settings. Click **Next** to continue or click **Back** to make changes.

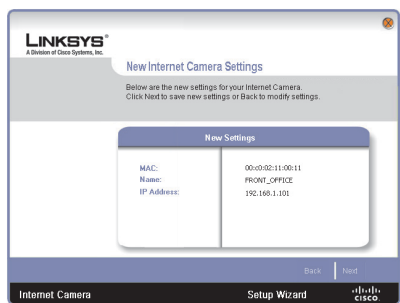


- I.** A confirmation window will appear, click **OK** to confirm the settings.

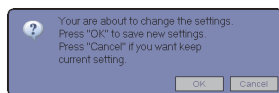


A timer will appear as the settings are saved to the Camera.



- J.** A window will appear indicating that the settings have been saved successfully. Click **OK** to continue.

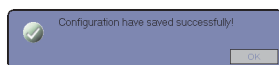


K. The Wizard will now return to the *Welcome* screen. Click **Exit** to automatically launch your default web browser and proceed to the Home page login screen.

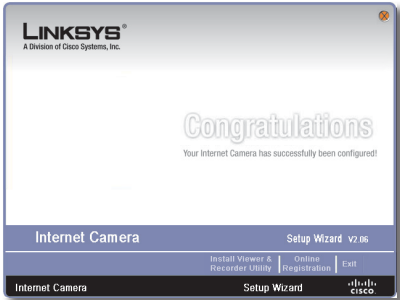


L. The login prompt will appear, enter **admin** in both the *User name* and *Password* fields.




M. Internet Explorer will prompt you to install ActiveX. In order to view video you must accept the ActiveX download.

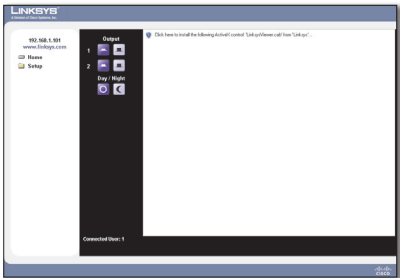

Click **Install ActiveX Control**.

 


N. Click the **Install** button.

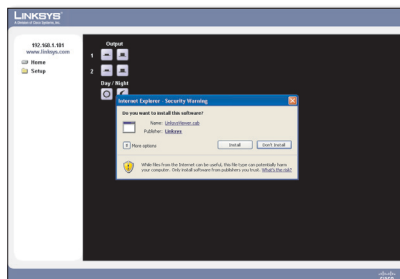

Installation is complete!

You should be able to view video on the home page.

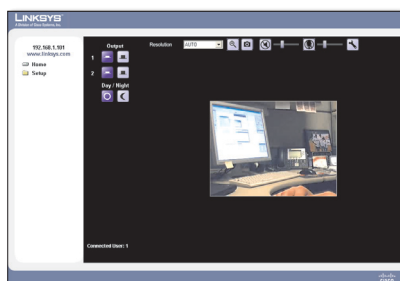


3 Adjusting the Lens

The Linksys Business Internet Video Camera uses an adjustable CS mount lens.

Adjust the focus by slowly rotating the Camera Lens Focus clockwise or counterclockwise.



NOTE: The resolution and video quality can be adjusted from the *Audio/Video > Video* screen in the web-based utility. Use the Camera Lens Focus to fine tune the image.

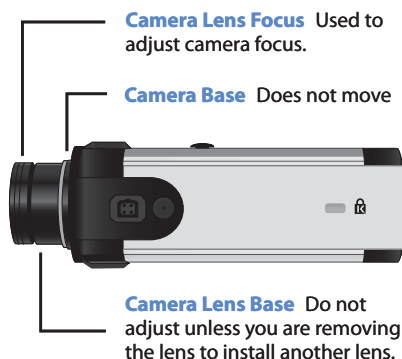

Optional Lenses

Use any C/CS-mount lens or one of the following recommended lenses:

Model	Description
CAMLWA	CS/Mount Wide-angled Camera Lens
CAMLMI	CS/Mount Manual Vari-focal with Manual Iris Control Camera Lens
CAMLAI	CS/Mount Vari-focal with Auto Iris Control Camera Lens (10x Zoom)
CAMEE1	Ruggedized Outdoor Enclosure (IP66 certified) with Heater and Blower

For additional information or troubleshooting help, refer to the User Guide on the CD-ROM. Additional support is also available via e-mail or by phone.

24-Hour Technical Support
800-326-7114

E-mail Support
support@linksys.com

Website
<http://www.linksys.com>
<http://support.linksys.com>

RMA (Return Merchandise Authorization)
<http://www.linksys.com/support>

FTP Site
<ftp://ftp.linksys.com>

Sales Information
800-546-5797 (800-LINKSYS)

LINKSYS®

A Division of Cisco Systems, Inc.

www.linksys.com